

Care and Cleaning Recommendations.

1 Before Use:

If sharing a device with others, **clean before use.**

2 Headset:

We suggest cleaning the headset routinely. Wipe all non-porous surfaces, including the top straps, the back head-pad, face cushion and the headset enclosure with a cleaning wipe.

Allow surfaces to remain wet for the duration specified on the packaging of the wipes. Let the surface dry completely before use.


DO NOT clean the headset and lenses with alcohol or bleach.

3 Lens Care:

Protect the optical lenses during use and storage to prevent sharp objects from scratching the lenses.

Do not clean the lenses with any harsh cleaning products such as alcohol or bleach. Using abrasive cleaning solutions may lead to damage to the lenses.

To prevent damage to the device, store the headset in its provided case when not in use.

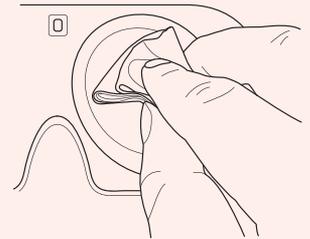

To avoid damaging the screen:
DO NOT expose the headset to direct sunlight.

Troubleshooting.

Headset not powering on? Make sure the headset is charged. To charge the device, ensure the charger is plugged into a working outlet and the device is plugged into the charger. A fully depleted battery will take two hours to fully charge.

Fully charged, but nothing visible on screen? If the headset is fully charged and not powering on, hold the power button for 15–20 seconds to force a reboot to the headset.

Unpaired Controller? If your controller becomes unpaired, a prompt will invite you to pair your controller. Follow the prompts to connect your controller. Refer to the USER MANUAL for detailed instructions.

Changing Input Modes: To change your **input mode**, in the home menu select the  SETTINGS icon and then select the INPUT SETTINGS icon. In the INPUT SETTINGS screen, you can change your input mode and your controller hand preference (if you are in controller mode) with the icons at the top of the page.

Controller not visible or pointing the wrong way? Press and hold the  HOME button on the controller while pointing the Controller forward to recenter the Controller.

Screen off-center? Press and hold the  HOME button on the right hand side of the headset to reorient OR select the  COMPASS icon in the menu OR remove the headset and put it back on and it will reorient itself.

If the view appears blurry, you may have to slightly adjust the headset's position up or down your face until the view is in focus.